

CMG SURVIVAL HEATER ACTIVATION

1. CLOSE Z1 RPCs FOR CMG SURVIVAL HEATERS ACTIVATION

NOTE

Heater activation occurs in the following
CMG pairs: 2 and 3, 1 and 4.

PCS

Z1: EPS: RPCM Z14B B
RPCM Z14B B

sel RPC 10

'Load: CMG2 Surv Htr'

√RPC Close Cmd - Ena
cmd RPC Position - Close
√RPC Position - CI

PCS

Z1: EPS: RPCM Z14B B
RPCM Z14B B

sel RPC 12

'Load: CMG3 Surv Htr'

√RPC Close Cmd - Ena
cmd RPC Position - Close
√RPC Position - CI

PCS

Z1: EPS: RPCM Z13B B
RPCM Z13B B

sel RPC 10

'Load: CMG1 Surv Htr'

√RPC Close Cmd - Ena
cmd RPC Position - Close
√RPC Position - CI

PCS

Z1: EPS: RPCM Z13B B
RPCM Z13B B

sel RPC 12

'Load: CMG4 Surv Htr'

√RPC Close Cmd - Ena
cmd RPC Position - Close
√RPC Position - CI